


# LOCTITE®

## PIPE REPAIR KIT

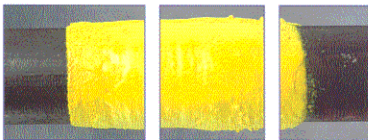

### BENEFITS

#### URETHANE IMPREGNATED FIBERGLASS TAPE

- Activated by immersing the tape in water for approximately 20 seconds
- Apply by wrapping tape around damaged area
- Cures in less than 30 minutes
- Return to service in less than 1 hour

### 1 STEP ONE: SURFACE PREP

Turn off the pressure.

Clean and degrease the area (Loctite® Natural Blue® Degreaser).

Dry the area to be repaired.

Abrade the surface to achieve a rough profile.

Flush with residue-free solvent. (Loctite® Non-flammable Electrical Contact Cleaner).

### 2 STEP TWO: MIX PRODUCT

Wearing gloves, knead Metal Magic Steel™ stick by hand.

Apply Metal Magic Steel™ Epoxy to the repair area.

### 3 STEP THREE: ACTIVATE PRODUCT

Activate tape by immersing in room temperature water for 20 seconds.

Squeeze excess water from tape and wrap the repair area.

The repair should extend outside the damaged area.

Keeping the gloves wet, lightly work the urethane tape to achieve a smooth finish.



#### KIT CONTAINS:

- One 2 1/2" stick of Metal Magic Steel™ Epoxy
- Pair of gloves
- Ready-to-use packaged kit available in two sizes: 2' x 6' and 4' x 12' tape

Henkel Technologies